

## BATTERY SAFETY INFORMATION

- Use only size CR2032 button cell batteries (2 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

### ⚠ WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void user's authority to operate this device. CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

The wheele bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



Printed in China  
0819-0-E/INT

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

© 2019 Moonbug Entertainment Ltd. Little Baby Bum™ is a trademark of Moonbug Entertainment Ltd. and used under license. All Rights Reserved.



www.littletikes.com  
www.littletikes.co.uk

Little Tikes Consumer Service  
2180 Barlow Road Hudson, Ohio 44236  
U.S.A.  
1-800-321-0183

MGA Entertainment UK Ltd.  
50 Presley Way, Crownhill, Milton  
Keynes, MK8 0ES, Bucks, UK  
0800 521 558

MGA Entertainment (Netherlands) B.V.  
Klipperak 201, 2411 ND Bodegraven, NL  
Tel: +31 (0) 172-758 038  
E-mail: klantenservice@mgae.com

Imported by MGA Entertainment  
Australia Pty Ltd  
Suite 2.02, 32 Delhi Road  
Macquarie Park NSW 2113  
1300 059 676



little tikes

## Singing Storybook

SKU: 652530

AGES 6+ MONTHS  
ADULT BATTERY INSTALLATION REQUIRED




Illustrations are for reference only. Styles may vary from actual contents.


## BATTERY REPLACEMENT

The batteries included are for in-store demonstration. It is recommended that, prior to playing, an adult install fresh button cell batteries. Here's how:

1. Open the hook and loop fastener covering the battery compartment on the spine of the storybook.
2. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover.
3. Install two (2) fresh 3V CR2032 button cell batteries (not included). Make sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment cover and tighten the screw.
5. Secure the hook and loop fastener over the compartment opening.

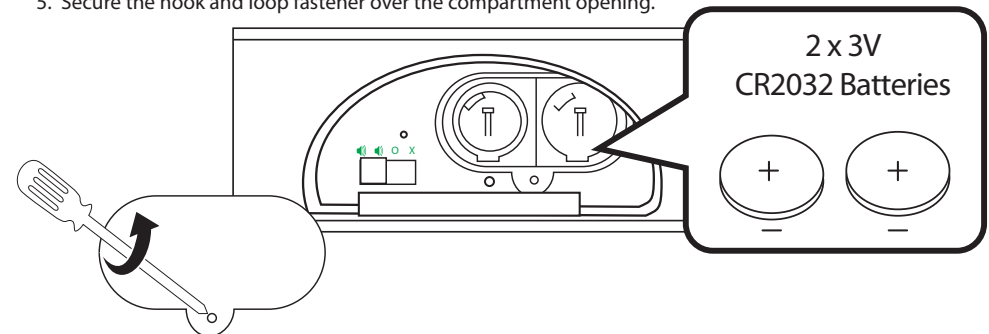


## QUICK START

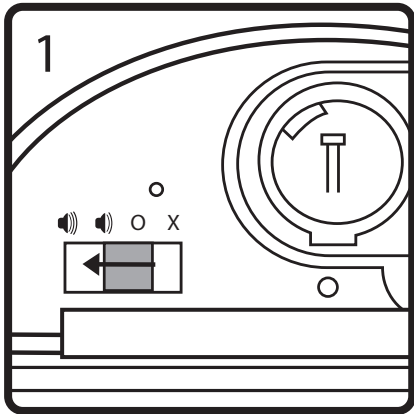 


Turn the switch on the battery compartment from Try Me to Low or High volume.

- X = TRY ME
- O = OFF
- 🔊 = LOW VOLUME
- 🔊 = HIGH VOLUME

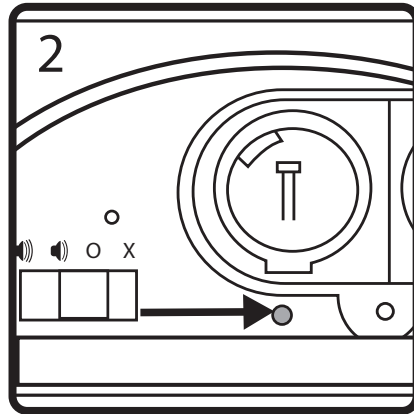

To change the language from English to French, use a small, pointed object (like a pin) to press the button on the battery compartment.

 NOTE: The button above the switch resets the Storybook to Try Me mode.

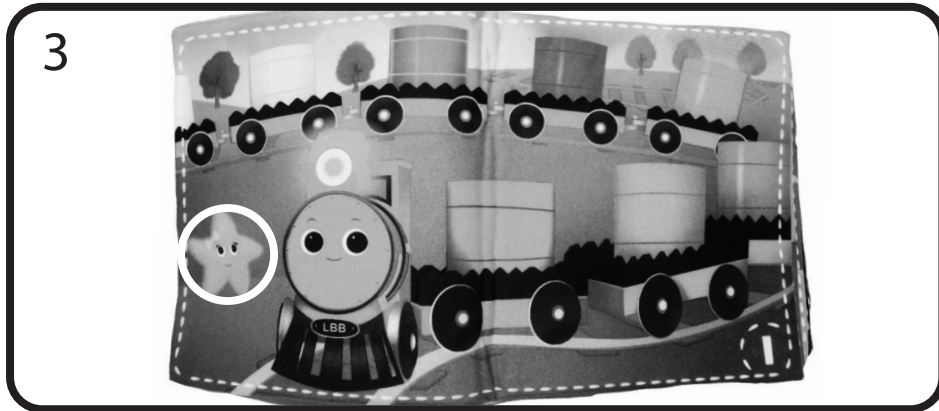

- Press the star on each page to hear the Storybook play a different song.
- Press again to turn the song off.
- See below for the list of 5 songs.

## SONGS

1. "THE COLOR TRAIN SONG"
2. "OLD MACDONALD"
3. "5 LITTLE DUCKS"
4. "THE ABC SONG"
5. "MR. GOLDEN SUN"

## IMPORTANT INFORMATION

- The Singing Storybook is NOT machine washable.
- Clean the Storybook with a slightly damp cloth if necessary.
- Keep moisture away from the battery compartment.
- Turn the product off after use in order to conserve battery power.

## LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year \* from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. \*The warranty period is three (3) months for daycare or commercial purchasers.

**U.S.A and Canada:** For warranty service or replacement part information, please visit our website at [www.littletikes.com](http://www.littletikes.com), call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

**Outside U.S.A and Canada:** Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.